


1. Displays numeric 8 digit
2. Displays mm - Mode
3. Displays inch - Mode
4. Change battery

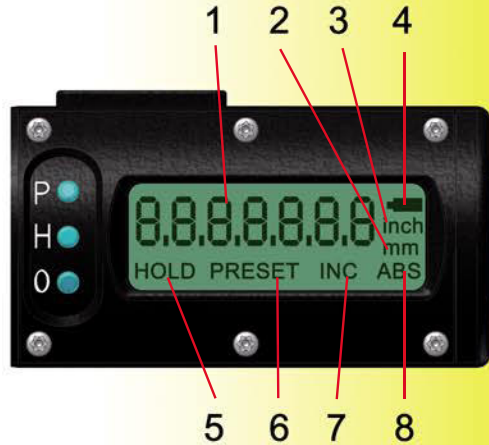

5. Display in Hold - Mode
6. Preset - Mode only by programming
7. Displays Incremental - Mode (INC)
8. Displays Absolut - Mode (ABS)

Function of the 0-button :

Absolut-Mode (ABS)

Press 0-button will take over the Preset value.



Incremental-Mode (INC)

Press 0-button will take over the 0.000.



Program-Mode (Preset)

Press 0-button will save and quit the program menu.



Battery exchange:

1. Wireless or cable interface must be removed.
Use the enclosed Torx screw driver.

2. Unscrew and remove Cover with the enclosed Torx screw driver. Now remove the Battery.


3. Insert a new CR2032 Battery with the plus looking upward.

4. Check the gasket position before you mount the cover.

5. Tighten the screws carefully!



Instruction Manual MICROTTEST Digital Internal Micrometer

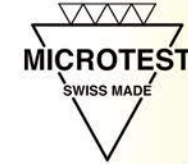

MICROTTEST®

*Your Partner
for Precision
Measuring Instruments*



Function of the H-button:

Press H-button less than 2 sec. will set display on hold.



Press H-button more than 2 sec. will send the measurement to the PC.



Press H-button less than 2 sec. will exit the hold mode if necessary.



Function of the P-button:

Press P-button less than 2 sec. switch between INC and ABS mode.



Press P-button more than 2 sec. will activate the Program-Mode.



Press H-button to change setting.




Press P-button less than 2 sec. for next step.



Auto-Power-Off-Time setting for permanent operation (0) till 199 minutes.

Press 0-button to save and quit mode.

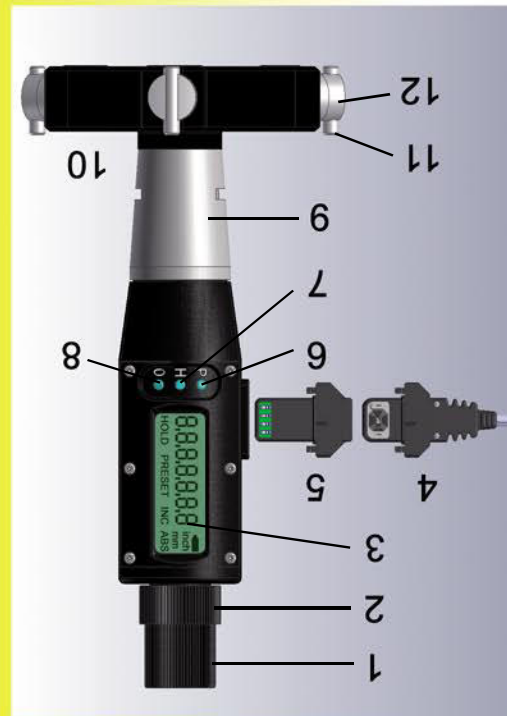

Description:

1. Ratchet
2. Pullback screw
3. High contrast display
4. Wired interface (optional)
5. Wireless interface (optional)
6. Program-button or switch between INC / ABS
7. Hold/Send-button
8. 0-button set zero in INC-Mode or 0-button takes over Preset in ABS-Mode
9. Connection-Shaft
10. Measuring head
11. Tungsten carbide pins
12. Measurement probes